



2020 Dehumidifier Command Hub Guide

Home Screen

Unit OFF

Unit must be plugged in.

Press  **MENU** to access settings and configuration controls

Press  **PURGE** to pump out condensate tank

Press  **ON/OFF** to turn unit on



Unit ON

- Job hours and Time
- Inlet/Outlet temp, %RH and GPP
- Current GPP removal


Bottom menu bar:

 Quick-Reference Inlet GPP
1 drop: < 60 GPP
2 drops: 60–90 GPP
3 drops: > 90 GPP

Press  **MENU** to access settings and configuration controls

Press  **PURGE** to pump out condensate tank

Press  **ON/OFF** to turn unit on.

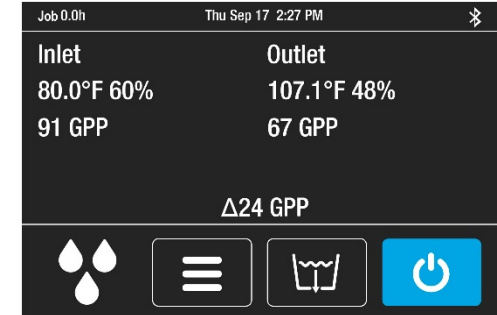

Menu Structure

